

Buttoned pouch

 

*1. If there are no instructions to use a specific stitch, use the straight stitch.
*2. Presser foot "J" (straight stitch) and buttonhole foot "A" will be used.




This mini-bag-type pouch can be used for carrying cosmetics and accessories. Try altering it, for example, by making it larger or orienting it vertically, to fit your needs. Buttonholes that are not cut open can be used as decoration, but here they are useful for securing the pouch with buttons.

< Materials >


- Outside fabric (tweed, 17 cm wide × 26 cm)
- Lining fabric (cotton/linen, 16.5 cm wide × 25 cm)
- Flap (plain-weave canvas, 13 cm wide × 22 cm)
- Stabilizer (for mediumweight fabrics, 11 cm × 10 cm)
- Decorative buttons (approx. 1.8 cm diameter) – 2

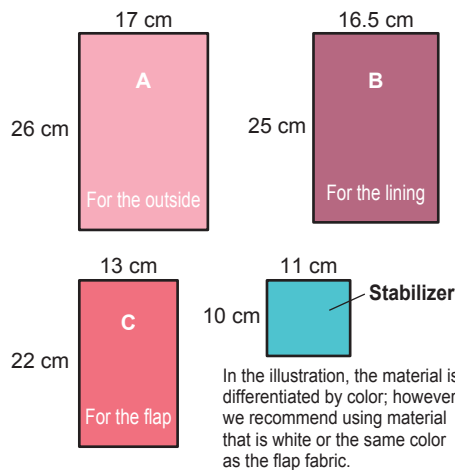


- 1 Separately fold A and B in half with their right sides together, and then stitch along each side.

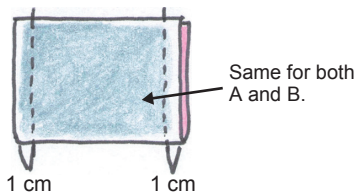

- 2 Fold over 1 cm at the openings of A and B, and then iron them.

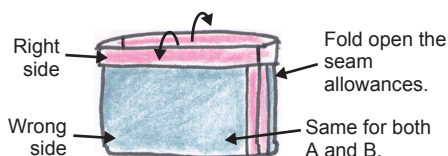


- 3 Turn A right side out, and then place B inside. Align the side seams, and then pin in place.

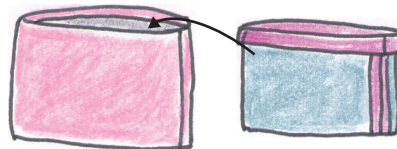


- 4 Set up the sewing machine for **free-arm sewing**, and then sew one line of stitching around the opening of A 5 mm from the edge.




For details on free-arm sewing, refer to the manual for your sewing machine.

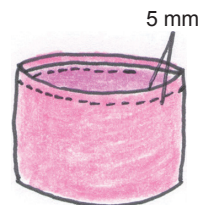

- 5 Make the flap. Iron stabilizer to the wrong side of C.

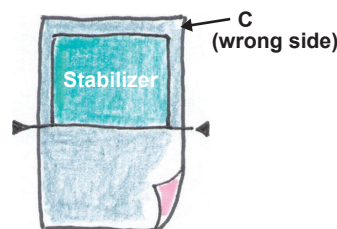


- 6 Fold in half with right sides together, and then stitch along both sides.

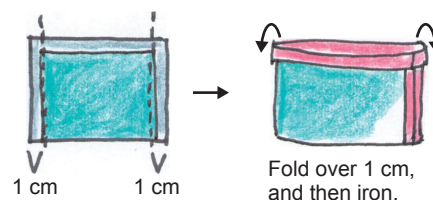

- 7 Turn right side out, and then sew **buttonholes** to fit the size of the decorative buttons.




 For details on buttonhole sewing, refer to the manual for your sewing machine.




Mark at a 45-degree angle in an area away from the seam allowances.

 - 8 Stitch along the opening and edges.



- 9 Attach the flap to the body.

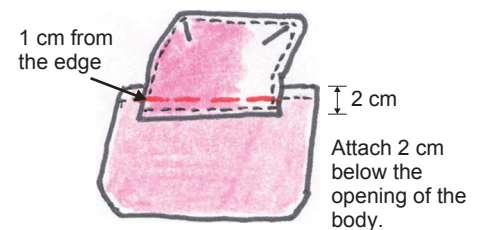

- 10 Sew on the buttons by hand.

